

Historic, archived document

Do not assume content reflects current scientific knowledge, policies, or practices.


1.8
H15R
no. 2



391801

Repair Your *ELECTRIC CORDS*

... PREPARING WIRES FOR RECONNECTION

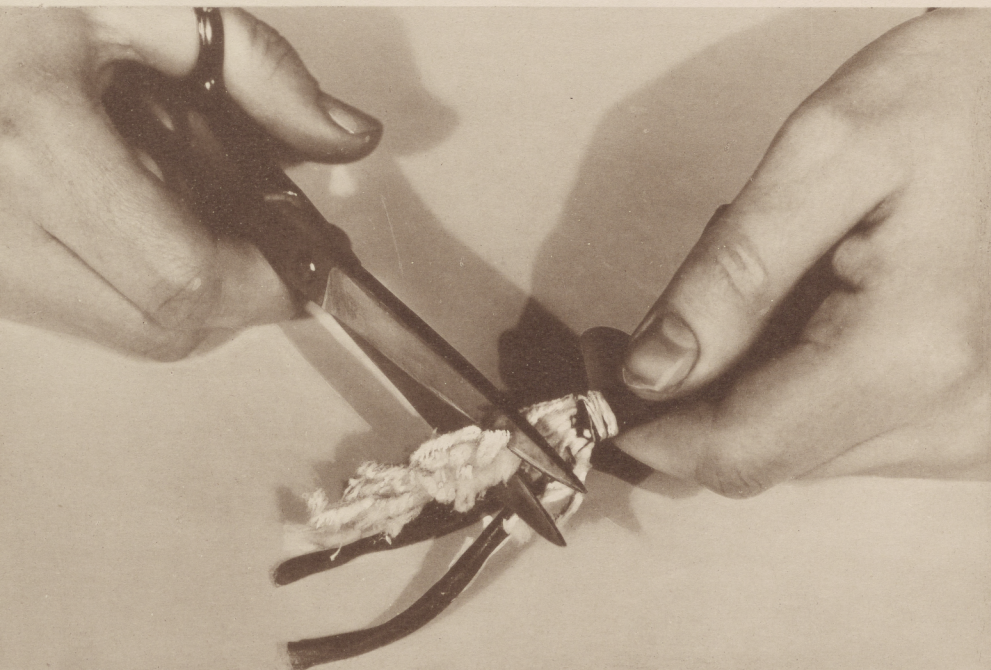

- ④ Cut off insulating material around rubber covered wires. If asbestos, cut about one-half inch from end of outer covering.


- ⑤ Slit rubber covering.... bare enough wire to go once around the screw. Don't cut too deeply or you'll injure the wires.



- ⑥ Cut off rubber cover... also fine threads next to the wires.



- ⑦ Scrape the wires gently until bright.... then twist each bundle together.

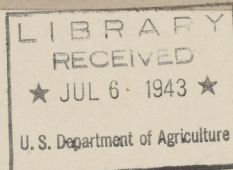

For sale by the Superintendent of Documents, U. S. Government Printing Office, Washington, D. C.
☆ U. S. GOVERNMENT PRINTING OFFICE : 1943 - O - 528886

BUREAU OF HUMAN NUTRITION AND HOME ECONOMICS
U. S. DEPARTMENT OF AGRICULTURE